

# PRINT SUPPLY STATUS PAGE – CHECK TONER LEVEL




Access Printer using Control Panel

Right Click Printer and choose Printing Preferences

HP LaserJet Professional P1102

Select **Services** Tab

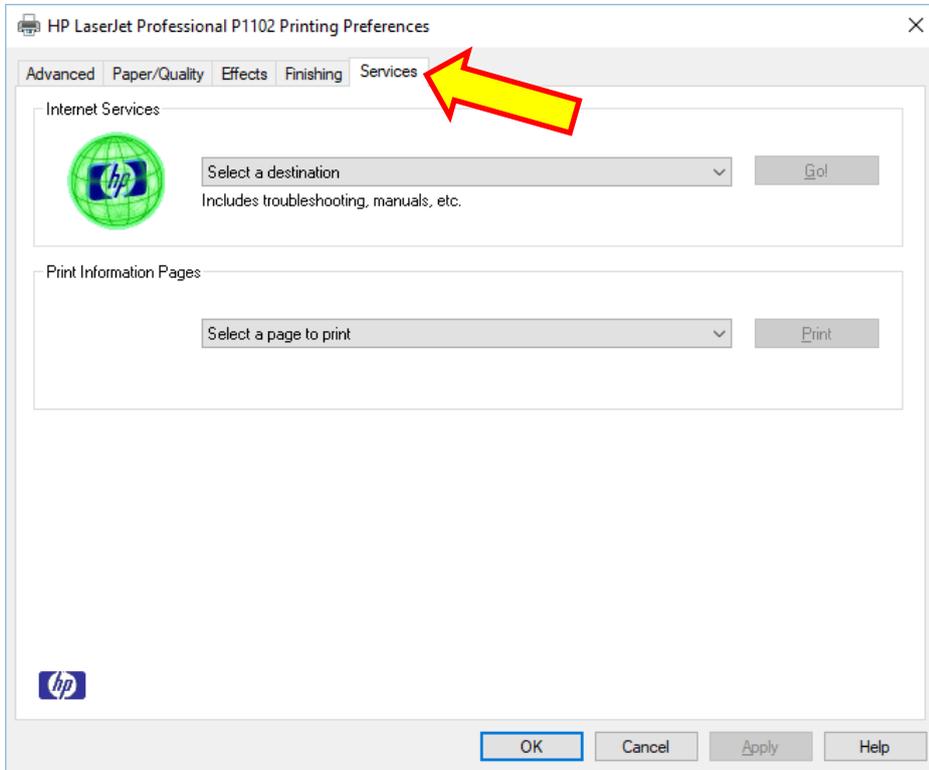

Select **Supply Status Page** from drop down menu and Click **Print** button

